


BIBLIOTECA DO A. R. ROITO
(Antiga Bil[US 566] C. M. L.)
N.º 903 ~~Custo~~ 17-9-19
Aumentado em GERMAN
Livro N.º _____ Pag. STICK
129-05-C.

GERMAN AUTOMATIC-LIGHTING
STICK GRENADE (TIME).

Description.

This grenade is similar in appearance to the ordinary "Stick" hand grenade, except that the handle is of metal painted field grey instead of being of wood.

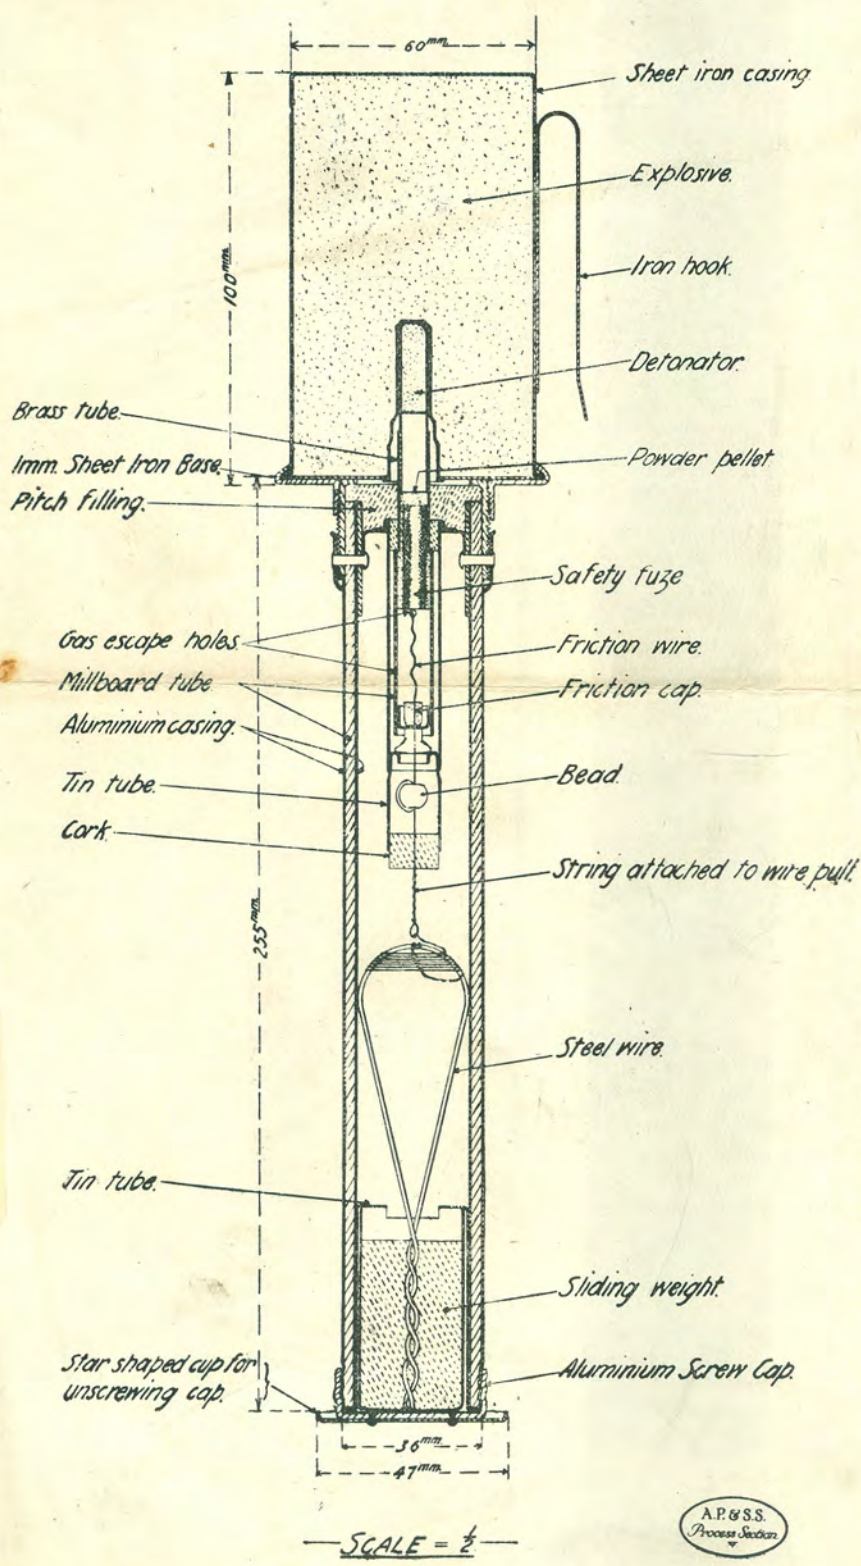

Method of Ignition.

In the hollow handle is a cylindrical weight, attached by a wire, part of which is coiled, to the friction lighter. Safety fuze and detonator are arranged as in the ordinary "Stick" grenade. When the screw cap at the end of the stick is removed, the weight is free to slide out, and when it does so, it pulls the wire and sets the friction lighter in action. Thus the grenade is lighted in the act of throwing.

To prepare for use.

- (1) Unscrew the handle, and see if the detonator is in position ; insert it if not already there and refix the handle.
- (2) Hold the grenade in the right hand and unscrew the screw cap at the end of the stick.
- (3) Throw the grenade well into the air.

To render useless.

- (1) After making sure that the screw cap is in position and the weight is not loose, unscrew the handle and remove the detonator.
- (2) Then remove the screw cap from the handle and throw the stick; this should light the fuze; or the weight may be pulled out by hand.